Securing the Enclosure

Turn the Padlock Latch until the enclosure door is securely closed. Then attach a padlock (not included) as shown.

The HN-0006 will accept padlocks with shackles/shanks ranging from 6mm to 8mm in diameter.

HN-0005 Keyed Lock Set

Also available to secure the NS and NFC series enclosure is the HN-0005 Keyed Lock Set. For more information visit www.ALTELIX.com

Got Questions?
We are here to help.
Contact us at:

support@altelix.com

USA & Canada Customers: 866-660-9434
International Customers: +1 561-660-9434

Altelix LLC USA: 866-660-WIFI (9434) International: +1 561-660-9434 support@altelix.com www.altelix.com

Copyright (C) 2017 Altelix LLC. All rights reserved. Altelix and the Altelix logo are Trademarks and/or Registered Trademarks of Altelix LLC.
Specifications are subject to change without notice. See **www.altelix.com** for most current information

Handle Padlock Latch for NS/NFC Series Enclosures

The HN-0006 is for use with Altelix NS series and NFC series enclosures. It is a direct replacement for the standard latch included with these enclosures.

What's In The Bag?

NS Series Steel Enclosure Installation

The HN-0006 comes pre-configured for use in the NS series enclosure. The second lock cam included is not needed for this installation.

Step 1
Remove the existing latch by removing the retaining nut.

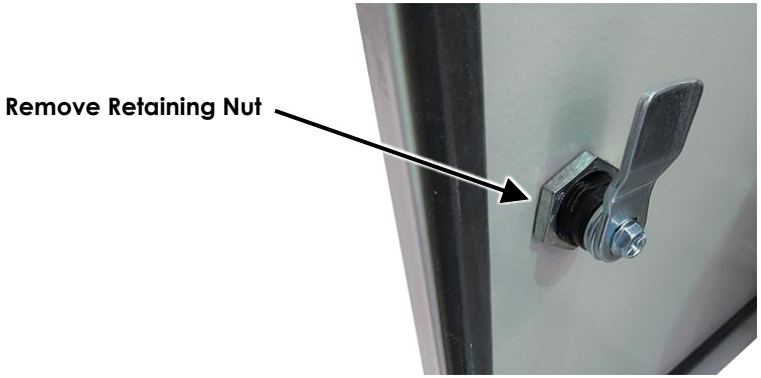

Step 2
Remove retaining nut from Padlock Latch and install into enclosure door. Orientate the latch as shown. Using a 27mm wrench, tighten retaining nut to secure Padlock Latch to enclosure door.

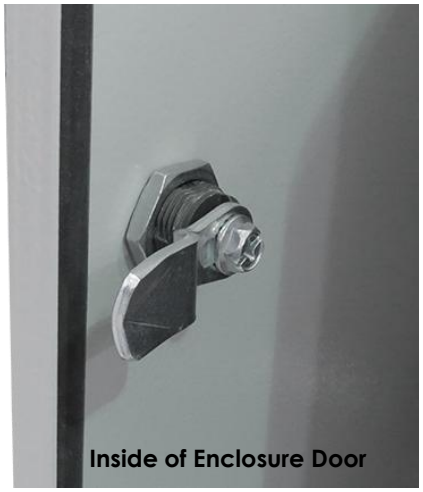

Once installed, test Padlock Latch to ensure proper operation.

NFC Series FRP Enclosure Installation

Step 1
Remove the existing latch by first removing the lock cam. Then the retaining nut can be removed.

Do not discard the nylon washer, it will be reused.

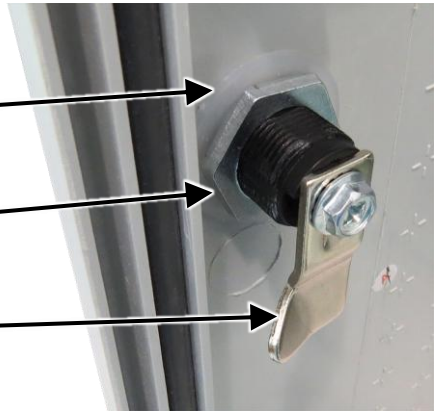

Step 2
Remove retaining nut from Padlock Latch and install into enclosure door. Orientate the latch as shown. Replace the nylon washer and using a 27mm wrench, tighten retaining nut to secure Padlock Latch to enclosure door.

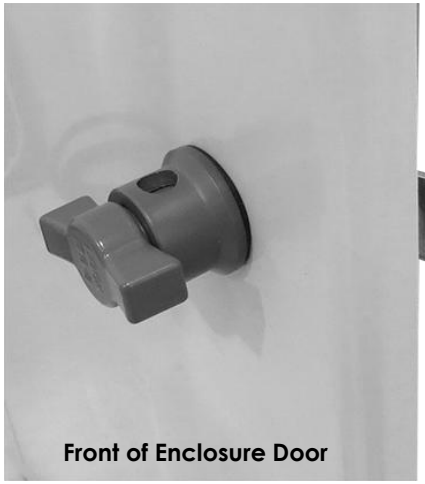

Step 3
Once Padlock Latch is secured, remove the lock cam which is for use with the NS series enclosures only. This will be replaced with the second lock cam included in the bag.

Step 4
Install the NFC enclosure lock cam as shown.
Once installed, test Padlock Latch to ensure proper operation.