



The following are the parts included with the MLPH2016B-KIT MOLLE panel kit.



**(4) Wall Mount
Brackets**




**(2) MOLLE Panel
Hinges**



**(8) Flat Head Screws
(2) Thumb Screws**




**(8) Wall Mount Screws
and Anchors**

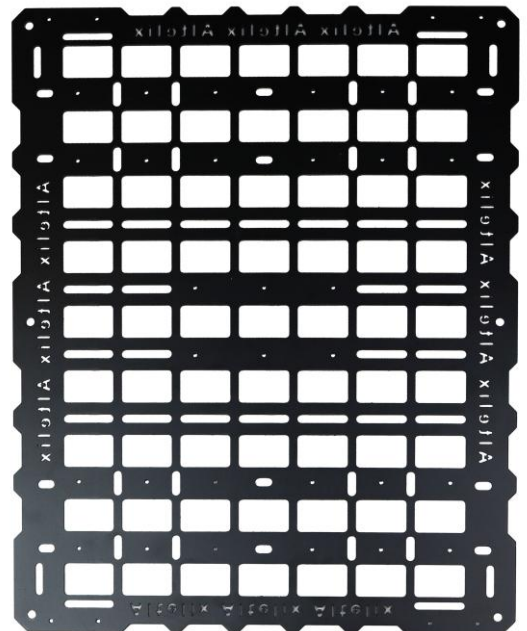


(1) MOLLE Panel

1. Using (4) Flat Screws from the hardware kit, attach the (2) hinges to the MOLLE panel as shown.

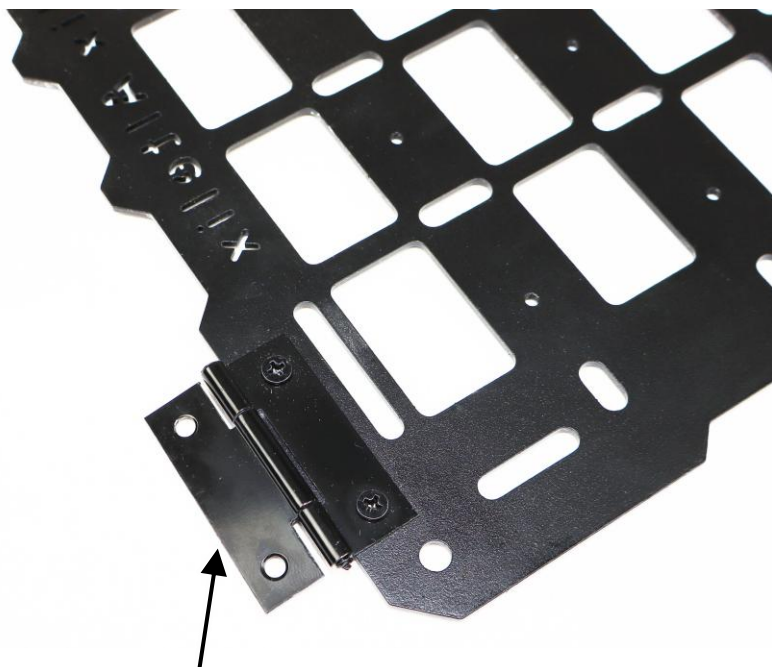


MOLLE Panel Hinge

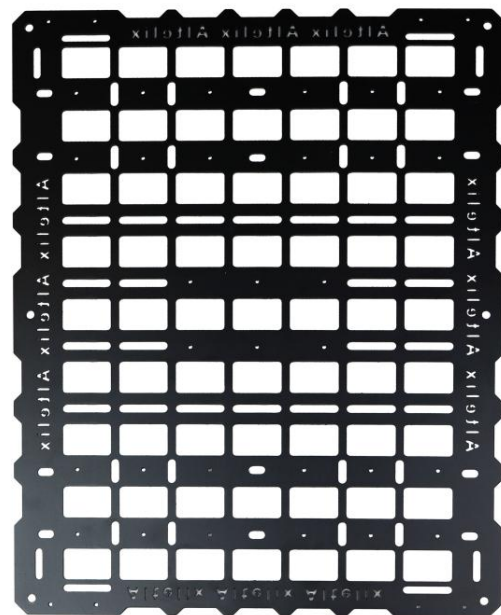


Hinge Locations

2. Using (4) Flat Head Screws from the hardware kit, attach (2) Wall Mount Brackets to the hinges as shown.

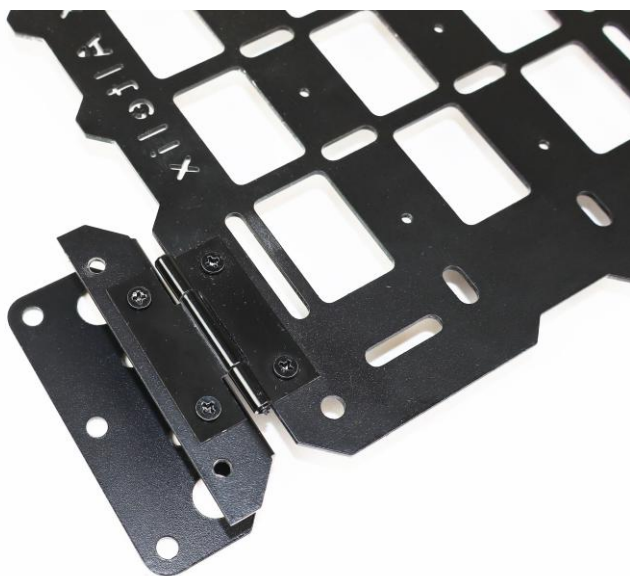


Wall Mount Brackets

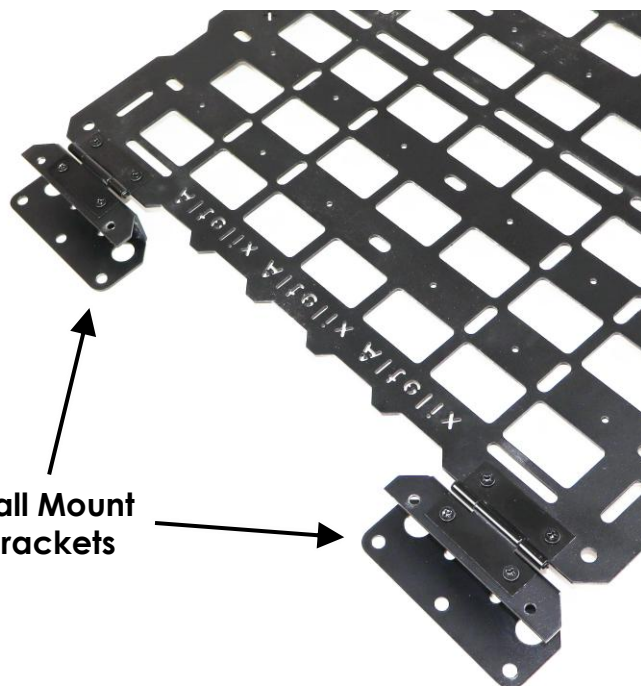


The diagram below illustrates the (8) hole locations required to mount the panel to a wall or other flat surface.

Mounting Hole Locations

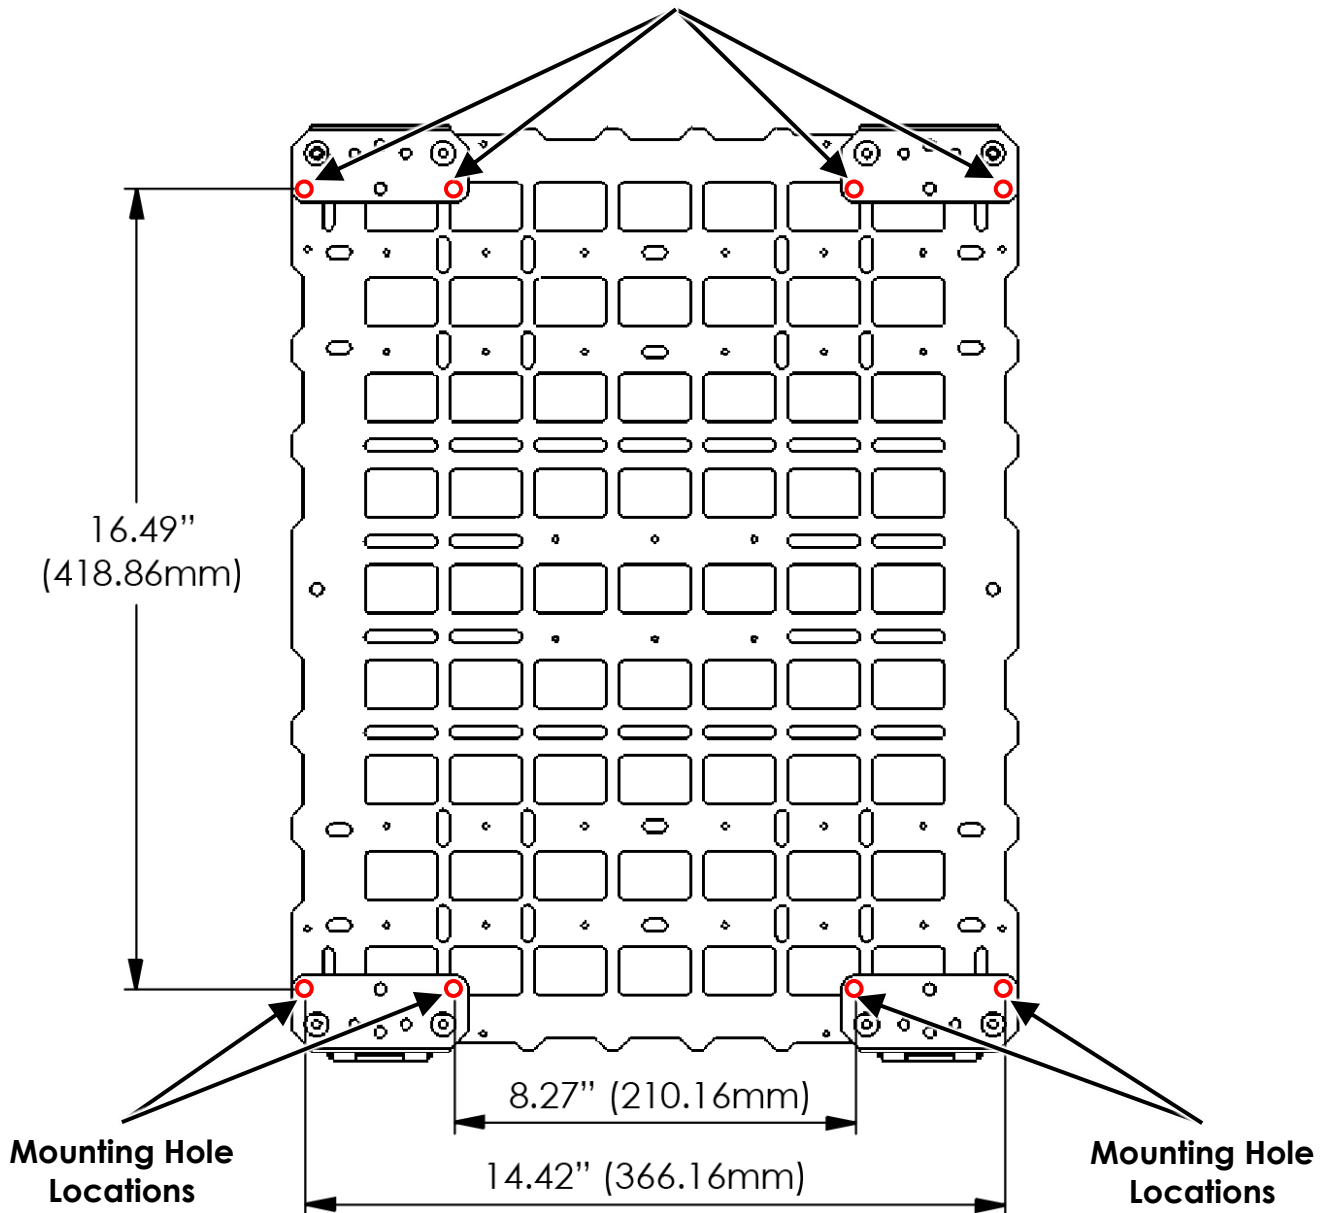

3. Using the included (8) Wall Screws and Anchors (if installing onto sheet rock or wood wall), install the MOLLE panel as shown.

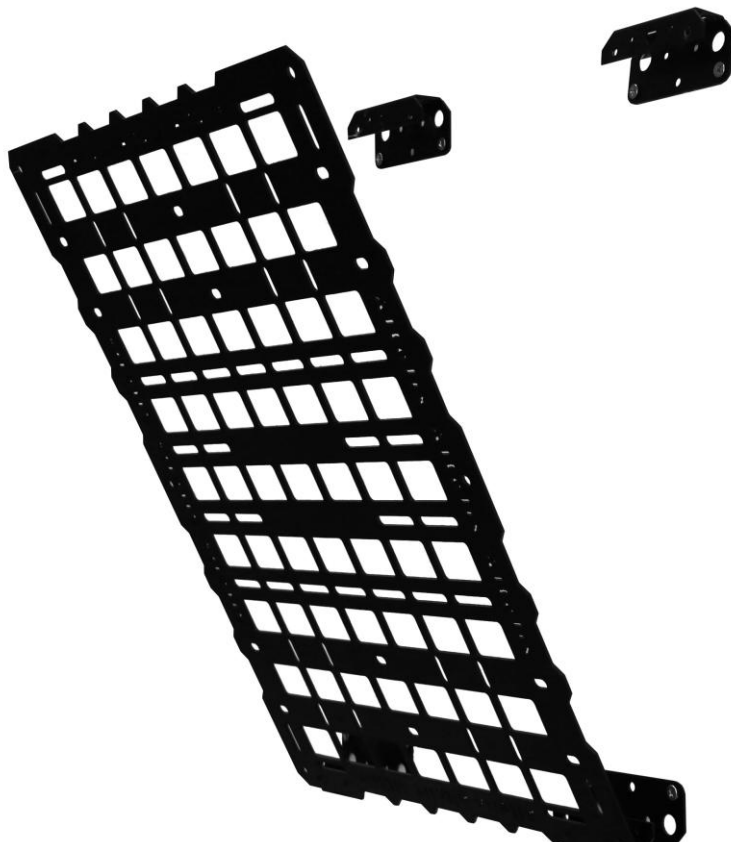

4. To secure the MOLLE in place, use the (2) Thumb Screws as shown.



Got Questions?

We are here to
help. Contact us at:



sales@altelix.com



USA & Canada: 866-660-9434

International: +1 561-660-9434