


The ALTELIX NMF series flange/wall mounting brackets attach to the rear of the enclosure as shown using hardware include with the enclosure.

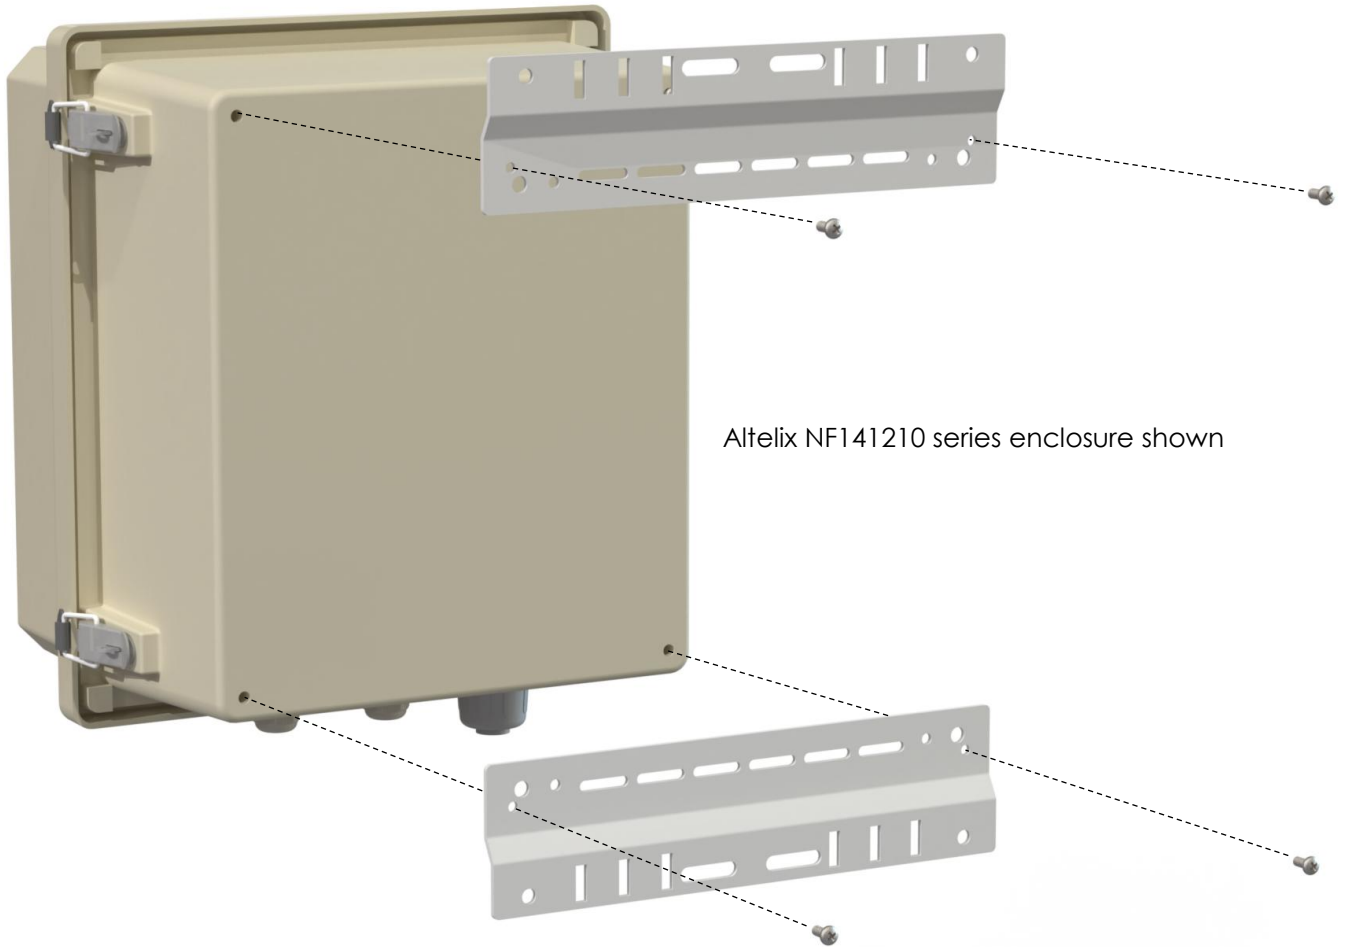

Altelix NF141210 series enclosure shown

Installation on NFC Series Enclosures

For installation on ALTELIX NFC enclosures, (4) holes are required to be drilled.



First drill through the (4) recessed holes in the back of the enclosure (1/4" recommended drill bit size). Be sure to follow proper safety procedures when drilling.

Using the hardware supplied with the enclosure, attach the mounting brackets to the rear of the enclosure.

Got Questions?

We are here to help. Contact us at:



sales@altelix.com



USA & Canada: 866-660-9434

International: +1 561-660-9434



www.Altelix.com

Altelix LLC USA: 866-660-WIFI (9434) International: +1 561-660-9434 sales@altelix.com www.altelix.com

Copyright (C) 2026 Altelix LLC. All rights reserved. Altelix and the Altelix logo are Trademarks and/or Registered Trademarks of Altelix LLC. Specifications are subject to change without notice. See www.altelix.com for most current information